



JINTEX

Sewing Machine Spare Parts

Juki LBH-780

Sewing Machine Part Book

8 pages

			
B2610-761-OAO Hand Stop Crank Asm.	B2923-761-000 Handle Crank	B3151-781-OAO Tension Releasing Lever No.1	B1415-761-000 Needle Bar Pitman
			
B1435-771-000 Regulating Lever	B1437-761-000 Regulating Lever Bracket	B1425-771-000 Bearing Bracket	B1420-771-000 Repositioning Lever Link
			
B2411-771-000 B/Thread Trimmer Driving Asm.	B2655-781-000 Starting Lever	B1805-771-OBO Hook Sleeve Asm.	B3540-771-OAO Oil Pump Base Ass'y
			
B1130-771-000 Frame Side Cover (B)	B1129-771-000 Side Cover (A)	B1139-771-000 Frame Side Cover (C)	B2401-771-OAO Needle Plate Asm.
			
B1112-771-OAO Face Cover Complete	B3451-781-000 Lifting Spring	B1507-761-000 Presser Spring	B2901-771-OOA Feed Cam



B2723-761-OBO

Ratchet Pawl (A) Ass'y



 
B3251-781-OAO

Bobbin Winder Asm.



B1403-771-000

Needle Bar Frame

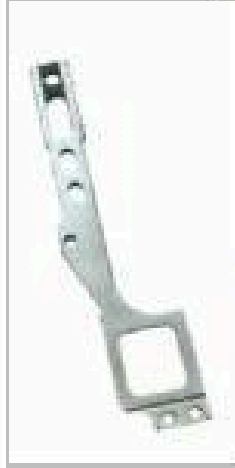


B2702-771-000

Knife Bar




B1551-781-000

 Work Clamp

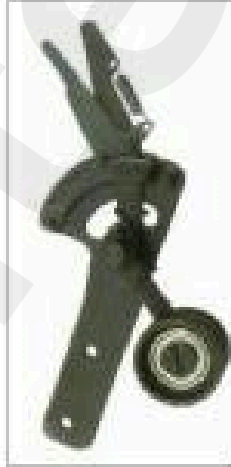


B7180-781-OAO

 Tension Pulley Bracket

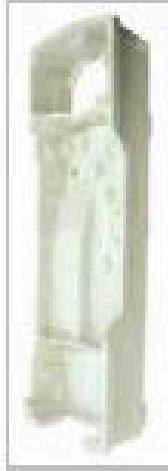

B1151-781-000

 Machine Base

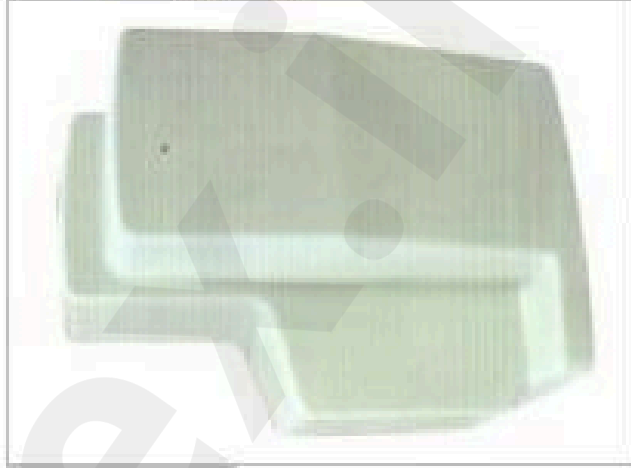

B1154-781-000

Belt Guard



B1208-771-000
Stop-Motion Cam



B2421-771-000
Bobbin Winder Trip Latch



B3403-761-000
Presser Bar Lifting Rod



B3406-761-000
Link



B1404-771-000
Hinge Stud



B1402-761-OAO
Needle Bar Connection



B2618-232-000
Stop Link Rod Hinge Stud



B1426-771-000
Spring



B1427-771-000
Spring



B2052-781-000
Spring



B2056-781-000
Spring



B2428-771-000
Spring



B2061-781-000
Spring



B2611-761-000
Presser Spring



B2614-761-000
Tension Spring



B2617-771-000
Tension Spring



B2619-232-000
Presser Spring



B2619-761-000
Presser Spring



B2710-771-000
Spring



B2718-761-000
Tension Spring



B2727-761-000

Tension Spring

B2726-761-000

Tension Spring

B2725-761-000

Tension Spring

B7183-781-000

Tension Spring



B3117-771-000

Spring

B2910-761-OAO

Feed Cam Driving Gear
Asm.

B2919-761-000

Feed Cam Driving Worm
Wheel

B2940-761-000

Spur Gear (66)



B2941-761-000

Spur Gear (285)

B2063-781-OBO

Thread Trimmer Holder
Asm.

B2712-761-000

Driving Lever Bell Crank

B3408-771-OAO

Lever Asm. (R)



B2920-761-OAO

Worm Asm.

B1434-771-000

Regulating Lever
Connection

B1401-761-000

Needle bar

B3108-771-000

Tension Release Rod



B2657-781-000

Hand Stop Crank Shaft

B2709-771-000

driving Lever Shaft

B2730-761-000

Hinge Stud

B2902-761-000

Bar Tripping Segment No. 1



B2904-771-000

Knife Tripping Segment



B2905-771-000

Tension Release Tripping
Segment 1



B2906-771-000

Tension Release Tripping
Segment 2



B2951-781-000

Lower-Speed Cam



B2952-781-000

Stopper Cam



B2051-781-OBO

Thread Trimmer Holder
Asm.



B3116-771-000

Tension Releasing Lever



B1601-761-OAO

Bell Crank Asm.



B1414-771-OAO

Frame Rock Shaft Crank
Asm.



B1436-761-000

Bell Crank



B1417-761-000

Connecting Forked Link



B1155-781-000

Belt Guard Plate Spring



B2720-761-000

Driving Connecting Rod
Asm.



B1603-763-OAO

Length Regulating Scale
Asm.



B7164-781-000

Shifter Holder Arm



B2716-771-000

Driving Crank Shaft



B1452-771-000

Bushing



B2620-771-000

Starting Link



B1253-781-000-A

Bearing Retainer



B1202-771-000

Counterweight



B3208-761-OAO

Bobbin Winder Tension
Bracket

B2001-762-OAO

Lower Needle Thread
Trimmer

B1511-761-OBO

Work Clamp Check
W/Holder

B1513-761-000

Work Clamp Bracket



B2011-761-000

Plate Spring (A)

B2405-761-000

Bobbin Thread Puller

B2408-761-000

Counter Knife

B2905-761-000

Tension Release Tripping
Segment



B2906-761-000

Tripping Segment
No.2, Under

B3201-762-OAO

Bobbin Winder Post Base
Asm.

B3402-761-000

Lever

B2731-761-000

Thread Check Wire



B2402-771-000

Needle Plate

B1511-771-OBO

Work Clamp Check Holder
Asm.

B2001-771-OAO

Needle Thread Trimmer
Asm.

B2001-761-OAO

Needle Thread Trimmer
Asm.



B2406-771-OAO

Bobbin Thread Trimmer
Blade Asm.

B2408-771-000

Counter Knife

B1451-761-000

Thread Guide

B1443-771-000

Barred Width Indicator



B1111-232-000
Thread Guide No.1



B1441-771-000
Seam Width Indicator



 
B3527-112-000
Plate Spring



B3109-761-000
Thread Eyelet



B1453-761-OAO
Regulating Lever Stopper
Asm.

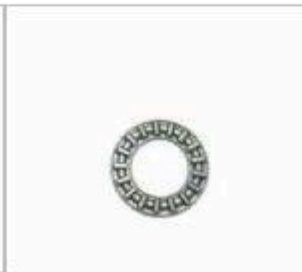

B1225-771-000
Bearing



B3258-781-OAO
Bobbin Winder Tension
Asm.



B1123-581-000
Thread Take-up Lever Oil
Guard



B3103-771-OAO
Tension Controller No.1
Asm.



B3110-771-OAO
Tension Controller No.2
Asm.



B7252-781-000
Belt



B2701-761-000
Knife Holder



B1901-761-BAO
Thread Take-up Lever Asm.
Ceramics



B2017-771-OAO
Locking Bracket Latch Asm.



 
B2417-771-000
Thread Guide



B2405-771-000
Bobbin Thread Puller



B1448-761-000
Spring

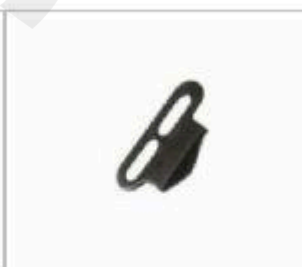

B2020-771-OOB
Needle Thread Trimmer
Guide



B2717-761-000
Latch



B1513-771-000
Work Clamp Bracket

			
B1509-012-000 Presser Spring Regulator	B1807-771-000 Bobbin Case Positioning Plate	B1405-771-000 Position Bracket	B2020-771-00A Needle Thread Trimmer Guide
			
B2027-771-000 Latch Presser Arm	B2058-781-000 Limiting Cam Spring	B2607-232-OAO Stop Link Arm	B1505-761-OAO Presser Bar Position Bracket Assembly
			
B2706-761-000 Knife Bar Connecting Link	B2032-771-000 Stud	B2030-771-000 Thread Trimming Shaft Segment	B3107-771-000 Tension Release Lever Crank No.2
			
B1429-771-OAO Tripping Rod Assembly	B1204-761-000 Needle Bar Crank Connecting	B7160-781-OAO Shifter Driving pin	B1445-761-OAO Needle Driving Gear Assembly
			
B2914-761-000 Clutch Spring	B1231-771-000 Stop cam Pressure Spring	B1212-232-000 Bakelite Segment	B1210-232-000 Stop-Motion Cam Pin Slide Block