



JINTEX

Sewing Machine Spare Parts

Juki LK-1850 (13 pages)

Sewing Machine Part Book

13 pages



B1821-280-000

Shuttle Race Latch (L)



B1820-280-000

Shuttle Race Latch (R)



135-16901

Indicator Lever



135-16703

Slide Block B



B1411-804-BOO

Bearing B



B1411-804-COO

Bearing C



135-26157

Bobbin Winder ASM.



B1814-980-000

Shuttle Race



135-10458

Worm Wheel ASM.



135-16109

Feed Driving Arm



135-17008

Feed Across Regulator



135-10367

Worm ASM.



135-03503

Stop-Motion Cam



B1817-280-OAO

Shuttle Race Ring
Assembly



135-08551

Cylinder Arm Cap ASM.



B1818-280-000

Shuttle Hook



B1812-280-OAO

Shuttle Driver ASM.



B1401-280-000

Needle Bar



B2604-980-000

Stop Link Rod



135-09500

Wiper Connecting Link



135-13205

Tension Release Bar

135-01309

Silicon Oil Pipe

B1402-280-000

Needle Bar Bushing, Upper

B1403-280-000

Needle Bar Bushing Lower



135-14807

Connecting Plate B

B2101-280-OAO

Wiper ASM.

B2102-280-000

Wiper Installing Plate

135-07009

Lowering Link



135-09609

Wiper Connecting Plate

B2410-980-000

Tension Spring

135-06704

Tension Spring

135-09708

Spring



B1901-280-OBO

Thread Take-Up Lever
ASM.

B2414-280-OAO

Moving Knife Driving Lever

B2415-280-OAO

Moving Knife Driving Lever

135-08908

Cylinder Arm Cap Spring B



135-08809

Cylinder Arm Cap Spring A

B2426-280-000

Needle Hole Guide 2.0mm

B1405-280-000

Needle Bar Thread Guide

B1125-280-000

Tension Thread Guide



B1126-552-000

Frame Thread Guide (A)



B1124-280-000

Frame Thread Guide (B)



B3114-771-000

Take Up Thread Guide



135-17503

Feed Plate Carrier Bar



135-10607

Feed Cam



135-16406

Feed Regulator Shaft



135-06605

Lowering Connecting Link



135-37501

Stop Motion Hook



B1122-280-000

Thread Take-Up Lever Oil
Gaurd



B1904-280-000

Take-Up Lever Pin



135-09955

Wiper Connecting Arm
ASM.



135-01200

Belt Cover Stopper Plate



135-16307

Feed Regulator



135-04451

Pulley ASM.



135-17107

Feed Across Driving Arm



135-04600

Slow Speed Pulley Shaft



135-17800A

Feed Bracket Complete Set



135-30100

oil Gauge



135-34060

Knife Driving Rod Tripping
ASM.



135-06258

Lowering Arm ASM.

ASM.



B1111-232-000

Thread Guide No.1



B1901-280-OAO

Balance ASM.



B1905-541-BOO


Needle Bearing



B2302-280-OAO

Tension Controller No.2

ASM.

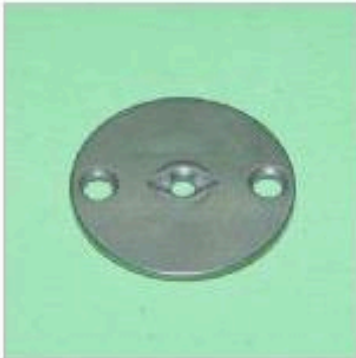

B2426-280-OOB

Needle Hole Guide 2.4mm



B2426-280-OOC

Needle Hole Guide 2.6mm



B1805-980-000

Oscillating Rock Shaft



135-01101

Belt Cover

			
B3508-280-000 Balance Lubricating Plate	CS-150111A-TH Thrust Collar Asm.	CS-180121A-SH Thrust Collar Asm.	PS-0250162-KH Spring Pin
			
RC-3221517-KP Retaining Ring 32	RC-6622018-KP Retaining Ring 66.2	SB-1350002-00 Bearing	SB-3120001-00 Bearing
			
SD-0651301-TH Hinge Screw	TA-0550604-RO Rubber Plug	TA-1250406-RO Rubber Plug	TA-1450404-RO Rubber Plug
			
TA-2100904-RO Rubber Plug	WP-0450846-SP Washer	135-03107 Main Shaft	135-09153 Lower Shaft Gear A ASM.
			
135-15408 Knife Driving Bar Large	135-08155 Crank Rod ASM.	135-21158 Stop-Motion Arm A ASM.	135-04501 Pulley Shaft



135-15564

Needle Plate ASM.

135-32254

Idler Pulley ASM.

135-22008

Stop-Motion Regulating
Cam

135-20309

Puller Pressing Plate



135-13155

Tension Release Arm ASM.

135-06100

Lowering Foot

135-20408

Driving Plate

B1202-280-000

Counterweight



135-24103

Inner Sleeve

135-03305

Bushing Intermediate

135-04204

High Speed Pulley

135-04709

Slow Speed Pulley



135-03750

High Speed Clutch Plate
ASM.

135-14401

Thread Trimming Auxiliary
Cam

135-24004

Outer Sleeve

135-23600

Collar B



135-03453

Thread Trimming Cam
ASM.

135-04808

Slow Speed Pulley Plate

B1211-980-000

Bearing

135-07157

Lowering Lever ASM.



135-06852

135-28609

135-21760

135-15002

Lowering Connecting Lever Grease Box

Regulating Lever ASM.

Connecting Link

A



135-13304

B2418-280-000

135-17305

135-06506

Supporter

Moving Knife Connecting
Link

Plate

Connecting Link



135-26850

135-21604

135-23808

135-09807

Thread Guide Bracket ASM. Stop Motion Link

Clutch Spring

Oil Shield Cap



B1115-232-OAO

135-14708

135-18105

135-15101

Thread Tension Assembly

Connecting Plate A

Lifting Lever Shaft

Stud



B1411-552-OAO

135-14104

135-18352

B1815-980-000

Needle Bar Connection
ASM.

Cam Stud

Lever Driving ASM.

Shhuttle Race Spring



135-20903

Stop Motion Connecting

Lever

135-21208

Starting Lever

135-21307

Tension Spring

135-21406

Stop-Motion Arm Shaft



135-21505

Stop-Motion Arm B

135-21901

Regulating Lever Stud

135-22107

Roller Shaft

135-22206

Roller



135-23105

Presser Decreasing Unit

135-23204

Driving Pulley

135-23428

Shaft

135-23915

Outer Sleeve Guide

Frame



135-24129

Inner Sleeve

135-24350

Rotation Preventing Latch

Asm.

135-24400

Spring

135-24608

Presser Decreasing Lever



135-24707

Lever Latch A

135-24806

Lever Latch B

135-24905

Presser Decreasing Lever

135-25001

Spring

Link

			
135-25100	135-25308	135-25407	135-25605
Stud	Idler Pulley Installing Plate	Screw	Auxiliary Cam
			
135-25704	135-28708	135-29003	135-29102
Spring	Rear Metal Bush	Once Through Oil Felt	Oil Felt
			
135-29201	135-29607	135-29904	B1109-980-000
Crank Lubricating Felt	Shuttle Packing	Lubricating Tank Felt	Bed Hook
			
B1123-280-000	B1127-280-000	B1207-980-000	B1215-980-000
Thread Guide No. 1	Silicon Oil Thread Guide	Main Shaft Bushing, Rear	Stop Motion Cam Latch
			
B1217-280-000	B1253-980-000	B1414-232-000	B1804-280-OAO
Safety Plate Stopper Spring	Driving Pulley Stop Motion	Crank Slide Block	Thrust Collar Asm.



B1813-980-000

Bushing

B1819-280-000

Shuttle Race Adjusting
Shaft

B1823-280-000

Spring

B2008-372-000

Nipper Bar Spring



B2302-280-000

Tension Post No. 2

B2401-980-OAO


Knife Driving Rod Tripping

B2404-280-000

Cam Roller

B2416-280-000

Collar

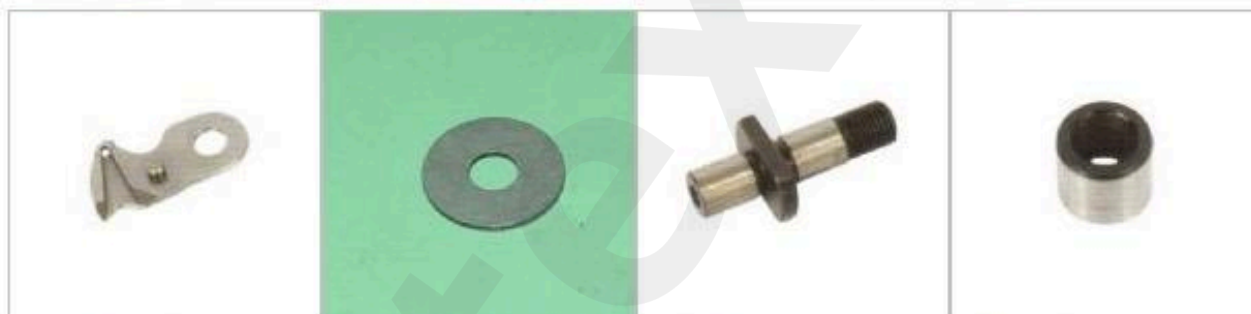

B2421-280-OAO

Moving Knife Asm.

B2423-280-00C

Washer

B2501-280-000

Feed Cam Roller Shaft

B2502-280-OOB

Feed Cam Roller



B2549-280-000

Steel Ball 1/8"

B2606-280-000

Presser Spring

B2607-280-000

Washer

B2608-280-000

Stop Rubber Cushion



B3014-280-OAO

Thrust Collar Asm.

B3039-980-OOOA

Hinge Screw

B3502-280-000

Lubricating Tank Felt

B3503-980-000

Grease Cap



B2424-280-000

Counter Knife

135-26306

Bobbin Winder Spindle

135-26801

Thread Guide Bracket

B1208-232-000

Stop Motion Cam



B2304-980-000

Tension Release Link Tripp

B2406-980-000

Knife Driving Conn. Sleeve

B2605-980-000

Hinge Screw

B2614-980-000

Stop Motion Regulator Cam
S



B2620-980-000

Stop Mption Connecting
Lever

B3030-980-000

Stop Motion Safety Plate

B3206-280-000

Bobbin Winder Trip Latch

B3207-280-000

Bobbin Winder Trip Latch



B3210-280-000

Bobbin Winder Brake

B3211-980-OAO

Thread Guide Bracket Asm. Stay

135-00608

Stay Locker

135-00707

Stay Locker



135-00855

Stay Guide Asm.

135-01002

Bed Locker

135-01507

Rubber Washer

135-01903

Bed Cover B

			
135-02000 Bed Cover A Spring	135-02109 Bed Cover Spring	135-02604 Oil Drain Gasket	135-02703 Belt Cover Presser Spring
			
135-02802 Spring Receiver	135-02901 Gasket Ring	135-03206 Bushing, Front	135-03602 Pin
			
135-03909 Spring	135-04006 Spacer	135-04105 Slow Speed Pulley Spring	135-04303 Washer
			
135-04402 Pulley	135-04907 Shim	135-05003 Ball Retainer	135-06456 Connecting Arm Asm.
			
135-07801 Base Connecting Pin	135-08403 Bushing Rear	135-14302 Roller	135-14500 Auxiliary Lever



135-14906

Knife Driving Bar Small

135-15606

Spring

135-16208

Feed Driving Arm Shaft

135-16505

Feed Regulator Stud



135-17206

Slide Block Stud

135-17602

Feed Plate Presser Plate

135-17701

Feed Plate

135-17909

Lifting Lever, Right



135-18006

Lifting Lever Left

135-18402

Tension Spring

135-18501

Spring Suspension

135-18600

Work Clamp Foot, Right



135-18709

Work Clamp Foot, Left

135-18808

Work Clamp Foot Face
Plate

135-18907

Support Plate

135-20101

Stop Motion Lever



132-20200

Stop Motion Lever Shaft

135-20606

Stop Motion Lever Plate
Spring

135-20705

Safety Plate

135-20804

Tension Spring