



JINTEX

Sewing Machine Spare Parts

Siruba C007J

Sewing Machine Part Book

7 pages



D3216

Main Feed Dog



H3362

Differential Feed Dog



MA80-A

Eye Guard Ass'y



MD30J

Tooth Belt



MG35

Thread Guide



MG37

Thread Guide



MT01

Looper



E1525

Needle Plate 248



E3826

Needle Plate 356



D1206

Main Feed Dog



D1207L

Main Feed Dog



H1258

Diff. Feed Dog



P2545

Presser Foot



P3217-A

Presser Foot 364



MC66D-E1

Main Feed Eccentric



M5248

Needle Clamp 248



MA79

Bracket



MC71

Washer



MH75

Needle Bar



MQ22

Plug



MV06

Needle Guard (Front)



MV09

Needle Guard Holder (Rear)



MV10

Needle Guard (Rear)



E1826

Needle Plate 356



E1827

Needle Plate 364



E3627P

Needle Plate 364



E3826P

Needle Plate 356



E4326

Needle Plate 356



D1207

Main Feed Dog



H1259

Diff. Feed Dog



M4364

Needle Clamp 364



M4460

Needle Clamp 460



M5356

Needle Clamp 356



M5364

Needle Clamp 364



P0217

Presser Foot 364



P1406

Presser Foot 356



P2408

Presser Foot



KC67

Oil Cap



MH16E

Thread Guide



VK02J

Thread Eyelet

			
MJ18 Finger Guard	MG01 Thread Take-Up	MJ37 Bracket	MG21 Bracket
			
MG28 Thread Take Up	MG31 Thread Guide	MH05 Thread Guide	MK13 Thread Guide
			
MK31 Thread Guide	MK05 Thread Guide	MK08 Thread Guide	MS23 Needle Guide
			
MS18 Bracket	MG33 Thread Guide	MS25 Supporting Plate Stop	MA11-2 Thread Guide
			
MA13 Needle Thread Take-Up Guard	MA47E Latch Spring	MA67 Flat Spring	MA19 Cover Latch Spring



MS24

Needle Guide

MJ22

Spring

MG35-A

Thread Guide Ass'y

MA10J/MA11-A

Sili. Oil Reservoir & Holder
Ass'y



MD22

Thread Take-up

ME18

Adjusting Lever Pin

MH60

Adjusting Lever Pin

MC51

Block



MH13

Block

MV32

Block

MV19

Block

MS44

Collar



MC60

Guide (Lower)

MG05

Bracket

MH43

Spreader Holder

MT02

Looper Holder



ME30

Looper Holder

ME70

Lever

MA11-1

Holder

MT10

Slider Holder



MT12

Slider Holder

MT09D

Slider

MJ29

Link

MH03

Needle Bar Bushing, Lower



MH08

Needle Bar Bushing, Upper

MH81

Bushing

MC86

Pin

MC83

Link



MJ27

Belt Crank

MG51

Needle Cooler

MH07D

Needle Bar Clamp

MH50E

Clamp



MV18

Main Feed Bar Driving
Conn.

MV25

Differential Feed Bar Driving
Conn.

MV03

Needle Guard Lever, Front

MV08

Needle Guard Lever, Rear



ME83

Link

MH66

Eccentric Ass'y

ME85

Bracket

MH49E

Crankshaft

			
MF13 Crank	MH52E Crank	MD08 Crank	MV16-E Main Feed Eccentric, C.Set
			
MC66D-E Main Feed Eccentric, C.Set	ME79 Lever	MC41 Main Feed Bar	MC44 Differential Feed Bar
			
MK01-A Looper Thread Handling Ass'y	MC93D Crank	ME05 Crank	MD04 Connecting Rod
			
MH64 Connecting Rod	MT24 Looper Rocker Arm	MT20-E Looper Connecting Rod	MS31J-A Thread Take-up Supporting Ass'y
			
MD17 Balance Weight	ME16 Balance Weight	MF01-1/2/3 Motion Ass'y	MD15-1 Bushing



MD23-2

Bushing

MD26-2

Bushing

MF23J

Gear (U)

MD28J

Gear (L)



MD37

Machine Pulley

MF29J

Handwheel

MC64

Link/Main Feed

MK35J

Thread Guide



MH19

Bracket

MA16E

Belt Cover

MR07J

Belt Cover

MA21J

Front Cover ass'y