



JINTEX

Sewing Machine Spare Parts

Siruba F007J / F007JD (22 pages)

Sewing Machine Part Book

22 pages

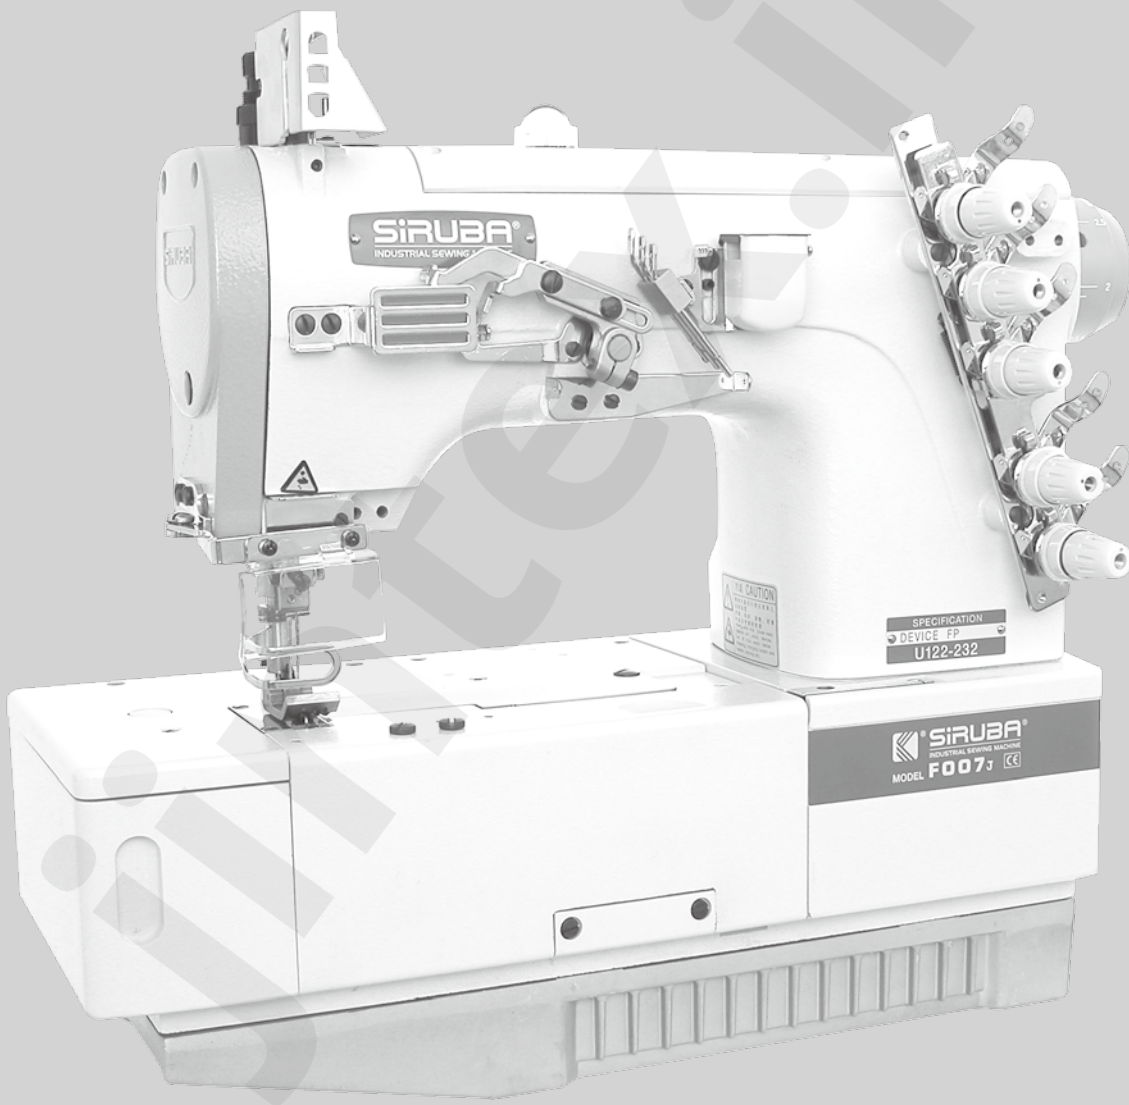
SIRUBA®

銀箭牌工業用縫紉機

INDUSTRIAL SEWING MACHINE

F007J/F007JD









零件圖 PARTS LIST



CE










高林股份有限公司
KAULIN MFG. CO., LTD.








									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J-W121	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-W121 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-U121	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10
F007J-U121 /UTH(UTK)	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10
F007J-W122	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-W122 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-U122	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10
F007J-U122 /UTH(UTK)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10

註：P2544-A/P2545-A 為固定式押具舌,亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A
P2446-A/P2447-A 為固定式押具舌,亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A

規格件表 CONVERSION CHART

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J-U122/FP	232	M5232	E 1623	D 1206	H 1257	P4011-A	ME28P	—	TV*5 #14
F007J-W 123	240 248 356 364	M5240 M5248 M5356 M5364	E 1534 E 1535 E 1836 E 1837	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-W 123/UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1534 E 1535 E 1836 E 1837	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-W 162	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	MH41	TV*5 #14~16
F007J-U 162	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	—	TV*5 #14~16
F007J-W162 UTG(UTJ)	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	MH41	TV*5 #14~16
F007J-U 162/UTH(UTK)	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	—	TV*5 #14~16
F007J-W 222/FQ	232 240 248 356 364	M5232 M5240 M5248 M5356 M5364	E 3023 E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1261 H 1262 H 1262	P1813-A P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10
F007J-W 222/UTG(UTJ)/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10
F007J-U 222/UTH(UTK)/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10

註：P2544-A/P2545-A 為固定式押具舌,亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A
P2446-A/P2447-A 為固定式押具舌,亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J-W222 /FQ/FEC(FAC)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10
F007J-U222 /FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P2314-A P2315-A P2616-A P2617-A	ME28	—	UY128GAS #10
F007J-W222A FQ/FEC(FAC)	240 248 356 364	M5240 M5248 M5356 M5364	E 3124 E 3125 E 3426 E 3427	D 1315 D 1315 D 1316 D 1316	H 1261 H 1261 H 1262 H 1262	P1914-A P1915-A P2216-A P2217-A	ME28	MH41	UY128GAS #10
F007J-W222 /FFD(FFP)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10
F007J-U222 /FFD(FFP)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P2314-A P2315-A P2616-A P2617-A	ME28	—	UY128GAS #10
F007J-W222 /FSM	240-4 248-4 364-4	M5240P M5248P M5364P	E 3724 E 3725 E 3727	D 1516	H 1262 H 1262 H 1262	P2714-A P2715-A P2717-A	ME28	MH41	UY128GAS #10
F007J-W322 /FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-W322 /UTG(UTJ)/FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	MH41	UY128GAS #10
F007J-U322 /FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	—	UY128GAS #10







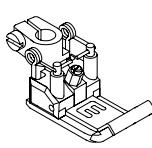
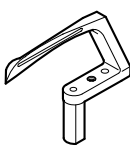

W222A-FAC(FEC) 短 切 刀

W222-FAC(FEC) 長 切 刀







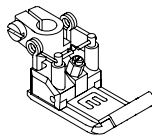
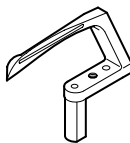
註：P2544-A/P2545-A 為固定式押具舌,亦可使用活動式押具舌 P2565-A 代替P2544-A/P2545-A

P2446-A/P2447-A 為固定式押具舌,亦可使用活動式押具舌 P2466-A 代替P2446-A/P2447-A

規格件表 CONVERSION CHART

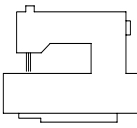


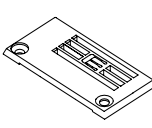

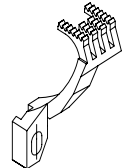
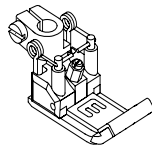
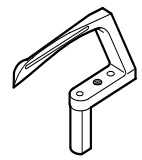

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主 送 具	差 送 具	押 具	勾 針	上 叉	針 號
F007J-U322 /UTH(UTK)/FDC	356 364	M5356 M5364	E 4826 E 4827	D 1207 D 1207	H 1359 H 1359	P2446-A P2447-A	ME28	—	UY128GAS #10
F007J-W322 /FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	MH41	UY128GAS #10
F007J-W322 /UTG(UTJ)/FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	MH41	UY128GAS #10
F007J-U322 /FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	—	UY128GAS #10
F007J-U322 /UTH(UTK)/FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	—	UY128GAS #10
F007J-W522 /FE(FFC)/FR	232 240 248 356 364	M5232 M5240 M5248 M5356 M5364	E 6023 E 6024 E 6025 E 6326 E 6327	D 2221 D 2221 D 2221 D 2222 D 2222	H 2267 H 2267 H 2267 H 2268 H 2268	P2813-A P2814-A P2815-A P3116-A P3117-A	ME28	MH41	UY128GAS #10
F007J-U522 /FE(FFC)/FR	240 248 356 364	M5240 M5248 M5356 M5364	E 6024 E 6025 E 6326 E 6327	D 2221 D 2221 D 2222 D 2222	H 2267 H 2267 H 2268 H 2268	P2814-A P2815-A P3116-A P3117-A	ME28	—	UY128GAS #10










註： F007J-W/U322A-³⁵⁶/₃₆₄ /FDC 時，該針板與送具改用 F007H-W/U122-³⁵⁶/₃₆₄ 之針板與送具
 註： P2544-A/P2545-A 為固定式押具舌，亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A
 P2446-A/P2447-A 為固定式押具舌，亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A

									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主 送 具	差 送 具	押 具	勾 針	上 叉	針 號
F007J-W512 /FE(FFC)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P 2914-A P 2915-A P 3216-A P 3217-A	ME28	MH41	UY128GAS #10
F007J-U512 /FE(FFC)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P 3414-A P 3415-A P 3716-A P 3717-A	ME28	—	UY128GAS #10

註： F007J-W/U322A-³⁵⁶/₃₆₄ /FDC 時，該針板與送具改用 F007H-W/U122-³⁵⁶/₃₆₄ 之針板與送具
 註： P2544-A/P2545-A 為固定式押具舌，亦可使用活動式押具舌 P2565-A代替P2544-A/P2545-A
 P2446-A/P2447-A 為固定式押具舌，亦可使用活動式押具舌 P2466-A代替P2446-A/P2447-A

規格件表 CONVERSION CHART





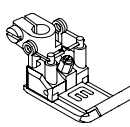
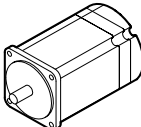
									
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號
F007J- U613 /FBP	256	M5356	E 1836L	D1207	H1259	P4000-A	ME28	—	TV*5 #14~18
	264	M5364	E 1837L	D1207	H1259	P4001-A	ME28	—	
F007J- U712	264	M5264	E 5827	D5207	H5259	P4117-A	ME28	—	TV*3 #11~16
F007J- U712 /FSP	264	M5264	E 5827	D5207	H5259	P5117-A (成品寬10mm用)	FS03/04	—	TV*3 #11~16
F007J- U712A /FSP	264	M5264	E 5827	D5207	H5259	P5118-A (成品寬12mm用)	FS03/04	—	TV*3 #11~16
F007J- U712 /FSR	264	M5264	E 5927	D5307	H5359	P4217-A	FS03/04	—	TV*7 #12~14
F007J- W722 /FY	388	M4388	E 6828	D6207	H6259	P6117-A	FS03/04/FY02	FY09	TV*7 #12
F007J- W922 /FW(FWP)	456 460 464	M5456 M5460 M5464	E1828P E1838P E1848P	D1207P	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SM1014B #10 (MY1014B #70 ,SY7256)
F007J- W922 /FW(FWP)/UTG	456 460 464	M5456 M5460 M5464	E1828P E1838P E1848P	D1207P	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SM1014B #10 (MY1014B #70 ,SY7256)
F007J- W922 /FW(FWP)/UTJ	456 460 464	M5456 M5460 M5464	E1828P E1838P E1848P	D1207P	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SM1014B #10 (MY1014B #70 ,SY7256)

										
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE	Motor
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號	馬 達
F007JD-W121	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10	T501HE
F007JD-W121 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-U121	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10	
F007JD-U121 /UTH(UTK)	240 248 356 364	M5240 M5248 M5356 M5364	E 1514 E 1515 E 1816 E 1817	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10	
F007JD-W122	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-W122 /UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-U122	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10	
F007JD-U122 /UTH(UTK)	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D1206 D1206 D1207 D1207	H1258 H1258 H1259 H1259	P2544-A P2545-A P2446-A P2447-A	ME28	—	UY128GAS #10	







註：P2544-A/P2545-A 為固定式押具舌,亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A

P2446-A/P2447-A 為固定式押具舌,亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A

規格件表 CONVERSION CHART

										
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE	Motor
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號	馬 達
F007JD-U122/FP	232	M5232	E 1623	D 1206	H 1257	P4011-A	ME28P	—	TV*5 #14	T501HE
F007JD-W123	240 248 356 364	M5240 M5248 M5356 M5364	E 1534 E 1535 E 1836 E 1837	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-W 123/UTG(UTJ)	240 248 356 364	M5240 M5248 M5356 M5364	E 1534 E 1535 E 1836 E 1837	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P2544-A P2545-A P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-W 162	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	MH41	TV*5 #14~16	
F007JD-U 162	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	—	TV*5 #14~16	
F007JD-W162 UTG(UTJ)	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	MH41	TV*5 #14~16	
F007JD-U 162/UTH(UTK)	356 364	M5356 M5364	E 1846 E 1847	D 1207 D 1207	H 1259 H 1259	P2446-A P2447-A	ME28A	—	TV*5 #14~16	
F007JD-W222/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10	
F007JD-W222/UTG(UTJ)/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10	
F007JD-U 222/UTH(UTK)/FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D 1215 D 1215 D 1216 D 1216	H 1261 H 1261 H 1262 H 1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10	

註：P2544-A/P2545-A 為固定式押具舌,亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A
P2446-A/P2447-A 為固定式押具舌,亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A

										
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE	Motor
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號	馬 達
F007JD-W222 /FQ/FEC(FAC)	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D1215 D1215 D1216 D1216	H1261 H1261 H1262 H1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10	T501HE
F007JD-U222 /FQ	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D1215 D1215 D1216 D1216	H1261 H1261 H1262 H1262	P2314-A P2315-A P2616-A P2617-A	ME28	—	UY128GAS #10	
F007JD-W222A FQ/FEC(FAC)	240 248 356 364	M5240 M5248 M5356 M5364	E 3124 E 3125 E 3426 E 3427	D1315 D1315 D1316 D1316	H1261 H1261 H1262 H1262	P1914-A P1915-A P2216-A P2217-A	ME28	MH41	UY128GAS #10	
F007JD-W222 /FFP	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D1215 D1215 D1216 D1216	H1261 H1261 H1262 H1262	P1814-A P1815-A P2116-A P2117-A	ME28	MH41	UY128GAS #10	
F007JD-U222 /FFP	240 248 356 364	M5240 M5248 M5356 M5364	E 3024 E 3025 E 3326 E 3327	D1215 D1215 D1216 D1216	H1261 H1261 H1262 H1262	P2314-A P2315-A P2616-A P2617-A	ME28	—	UY128GAS #10	
F007JD-W322 /FDC	356 364	M5356 M5364	E 4826 E 4827	D1207 D1207	H1359 H1359	P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-W322 /UTG(UTJ)/FDC	356 364	M5356 M5364	E 4826 E 4827	D1207 D1207	H1359 H1359	P2446-A P2447-A	ME28	MH41	UY128GAS #10	
F007JD-U322 /FDC	356 364	M5356 M5364	E 4826 E 4827	D1207 D1207	H1359 H1359	P2446-A P2447-A	ME28	—	UY128GAS #10	
F007JD-U322 /UTH(UTK)/FDC	356 364	M5356 M5364	E 4826 E 4827	D1207 D1207	H1359 H1359	P2446-A P2447-A	ME28	—	UY128GAS #10	

W222A-FAC(FEC) 短 切 刀










W222-FAC(FEC) 長 切 刀

註：P2544-A/P2545-A為固定式押具舌,亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A

P2446-A/P2447-A為固定式押具舌,亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A







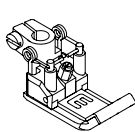
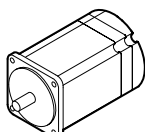
規格件表 CONVERSION CHART

規格件表 CONVERSION CHART

										
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE	Motor
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號	馬 達
F007JD-W322 /FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	MH41	UY128GAS #10	☐ T501HE
F007JD-W322 /UTG(UTJ)/FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	MH41	UY128GAS #10	
F007JD-U322 /FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	—	UY128GAS #10	
F007JD-U322 /UTH(UTK)/FDE	356 364	M5356 M5364	E 4836M E 4837M	D 1207 D 1207	H 1459 H 1459	P2446Q-A P2447Q-A	ME28	—	UY128GAS #10	
F007JD-W522 /FE/FR	240 248 356 364	M5240 M5248 M5356 M5364	E 6024 E 6025 E 6326 E 6327	D 2221 D 2221 D 2222 D 2222	H 2267 H 2267 H 2268 H 2268	P2814-A P2815-A P3116-A P3117-A	ME28	MH41	UY128GAS #10	
F007JD-U522 /FE/FR	240 248 356 364	M5240 M5248 M5356 M5364	E 6024 E 6025 E 6326 E 6327	D 2221 D 2221 D 2222 D 2222	H 2267 H 2267 H 2268 H 2268	P2814-A P2815-A P3116-A P3117-A	ME28	—	UY128GAS #10	
F007JD-W512 /FE	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P 2914-A P 2915-A P 3216-A P 3217-A	ME28	MH41	UY128GAS #10	
F007JD-U512 /FE	240 248 356 364	M5240 M5248 M5356 M5364	E 1524 E 1525 E 1826 E 1827	D 1206 D 1206 D 1207 D 1207	H 1258 H 1258 H 1259 H 1259	P 3414-A P 3415-A P 3716-A P 3717-A	ME28	—	UY128GAS #10	

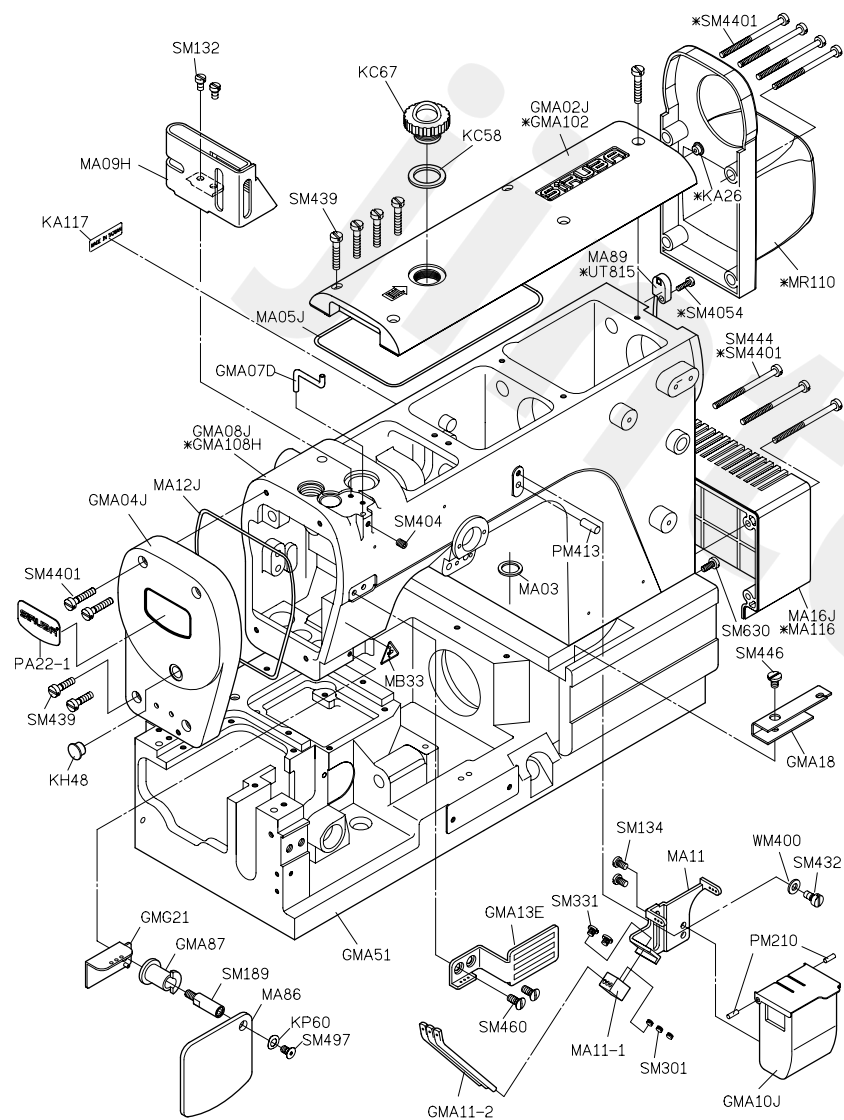
註： F007JD-W/U322A-³⁵⁶/₃₆₄ /FDC 時，該針板與送具改用 F007H-W/U122-³⁵⁶/₃₆₄ 之針板與送具

註： P2544-A/P2545-A 為固定式押具舌，亦可使用活動式押具舌 P2565-A 代替 P2544-A/P2545-A
P2446-A/P2447-A 為固定式押具舌，亦可使用活動式押具舌 P2466-A 代替 P2446-A/P2447-A

										
MODEL	SUB-CLASS	NEEDLE CLAMP	NEEDLE PLATE	MAIN FEED DOG	DIFF. FEED DOG	PRESSER FOOT	LOOPER	SPREADER	NEEDLE	Motor
機 型	規 格	針 座	針 板	主送具	差送具	押 具	勾 針	上 叉	針 號	馬 達
F007JD-U613 /FBP	256	M5356	E 1836L	D 1207	H 1259	P 4000-A	ME28	—	TV*5 #14~18	H T501HE
	264	M5364	E 1837L	D 1207	H 1259	P 4001-A	ME28	—		
F007JD-U712	264	M5264	E 5827	D 5207	H 5259	P 4117-A	ME28	—	TV*3 #11~16	
F007JD-U712 /FSP	264	M5264	E 5827	D 5207	H 5259	P5117-A (成品寬1.0mm用)	FS03/04	—	TV*3 #11~16	
F007JD-U712A /FSP	264	M5264	E 5827	D 5207	H 5259	P5118-A (成品寬1.2mm用)	FS03/04	—	TV*3 #11~16	
F007JD-U712 /FSR	264	M5264	E 5927	D 5307	H 5359	P 4217-A	FS03/04	—	TV*7 #12~14	
F007JD-W722 /FY	388	M4388	E 6828	D 6207	H 6259	P 6117-A	FS03/04/FY02	FY09	TV*7 #12	
F007JD-W922 /FW(FWP)	456 460 464	M5456 M5460 M5464	E1828P E1838P E1848P	D1207P	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SM1014B #10 (MY1014B #70 ,SY7256)	
F007JD-W922 /FW(FWP)/UTG	456 460 464	M5456 M5460 M5464	E1828P E1838P E1848P	D1207P	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SM1014B #10 (MY1014B #70 ,SY7256)	
F007JD-W922 /FW(FWP)/UTJ	456 460 464	M5456 M5460 M5464	E1828P E1838P E1848P	D1207P	H1259	P2428Q-A P2438Q-A P2448Q-A	FW28D	MH41	SM1014B #10 (MY1014B #70 ,SY7256)	

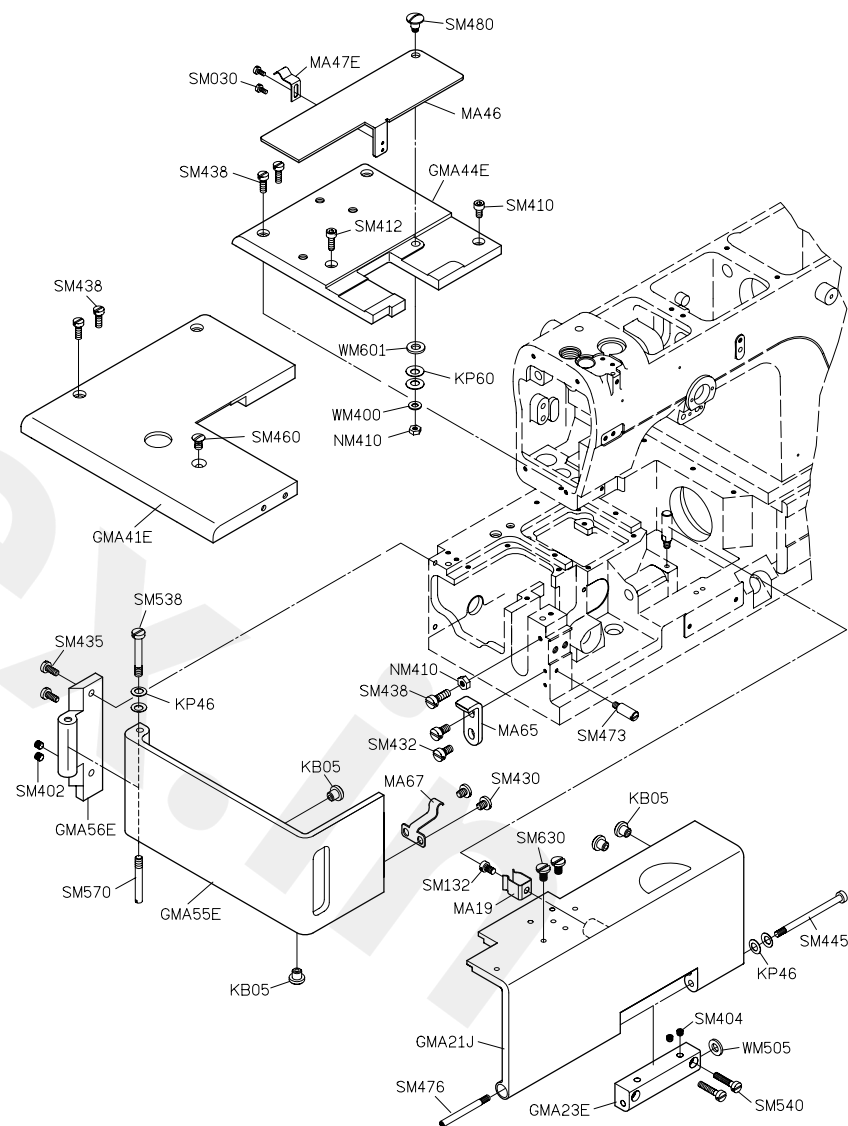
F007J: 為一般馬達,外置式機種 ; F007JD: 為加裝直驅伺服馬達機種

PARTS LIST FOR MA GROUP

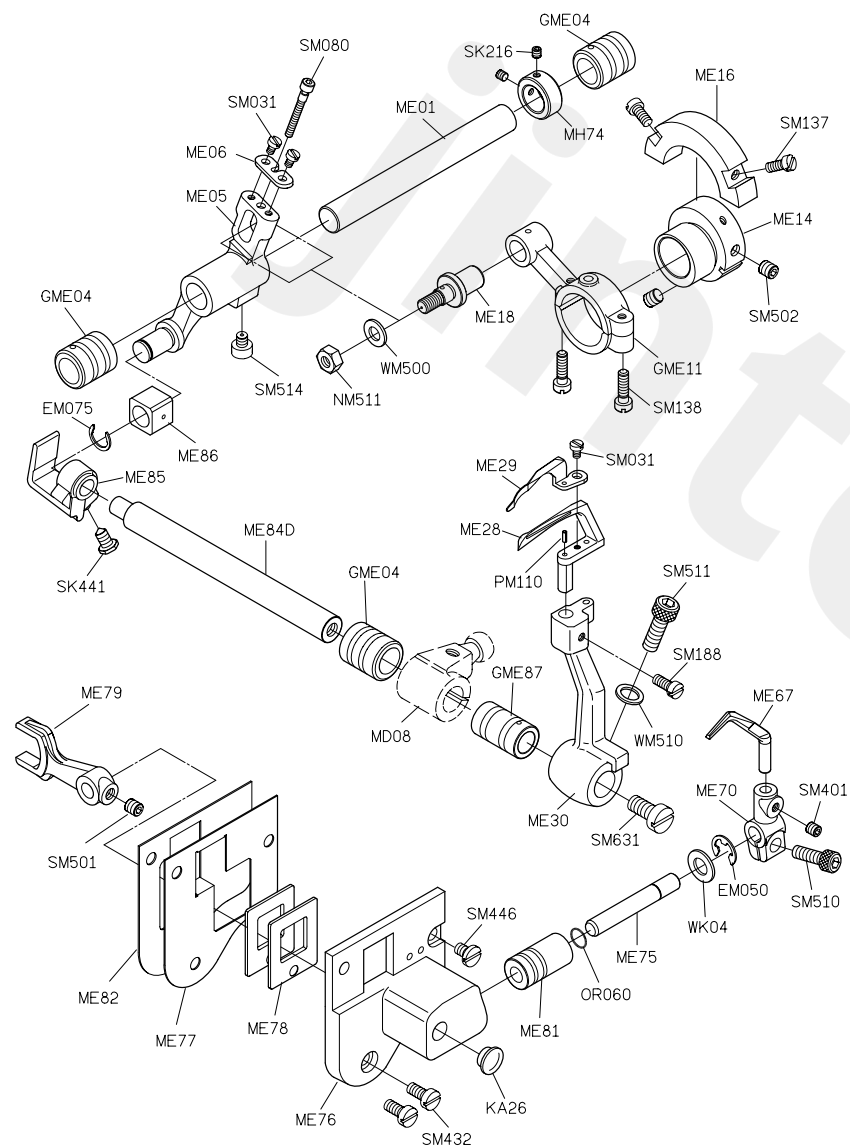


FOR F007J/F007JD
*USE FOR F007JD

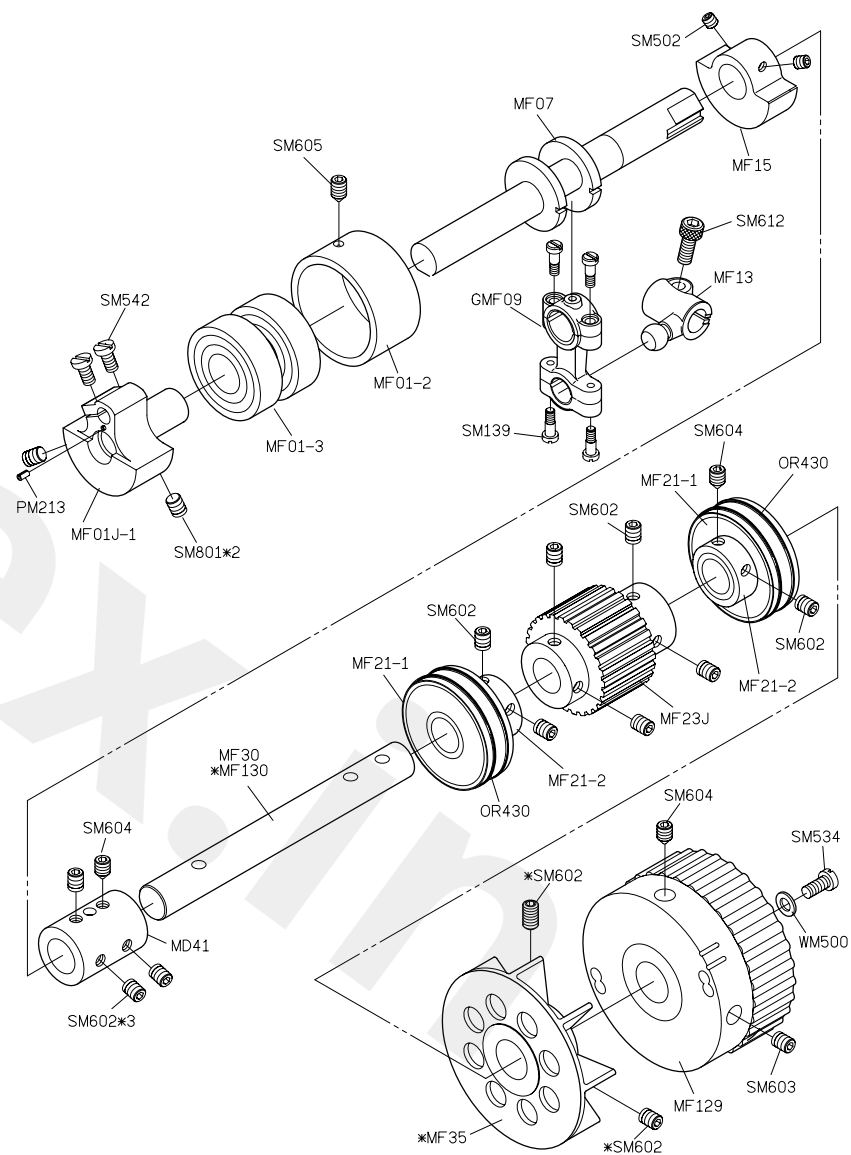
PARTS LIST FOR MA GROUP



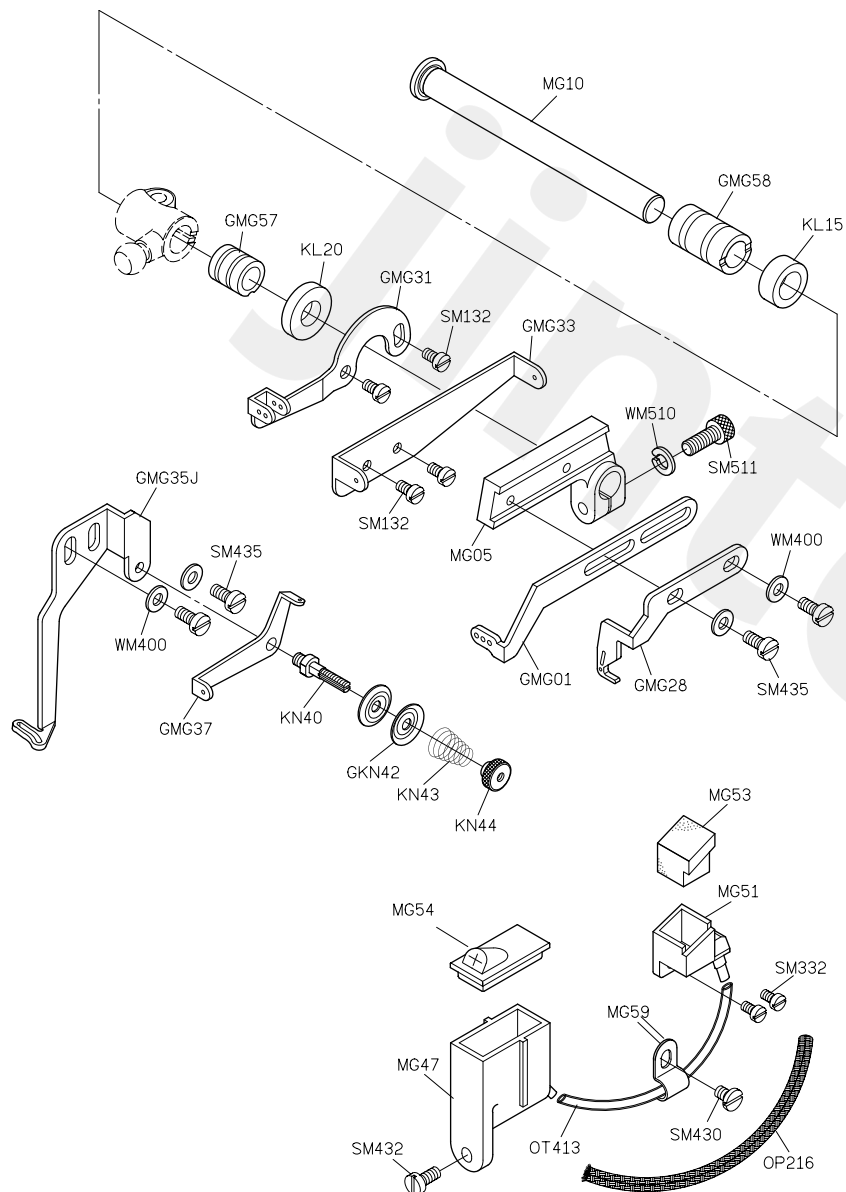
PARTS LIST FOR ME GROUP



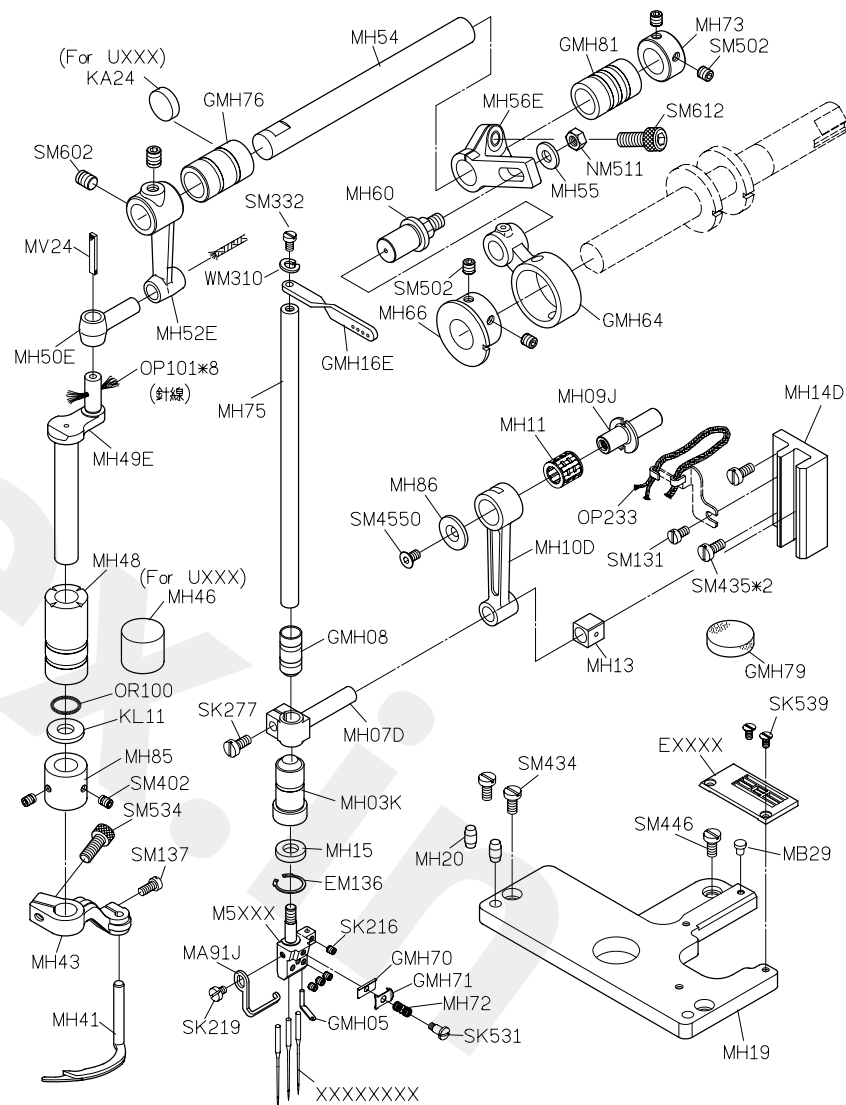
PARTS LIST FOR MF GROUP



FOR F007J/F007JD
*USE FOR F007JD



PARTS LIST FOR MG GROUP

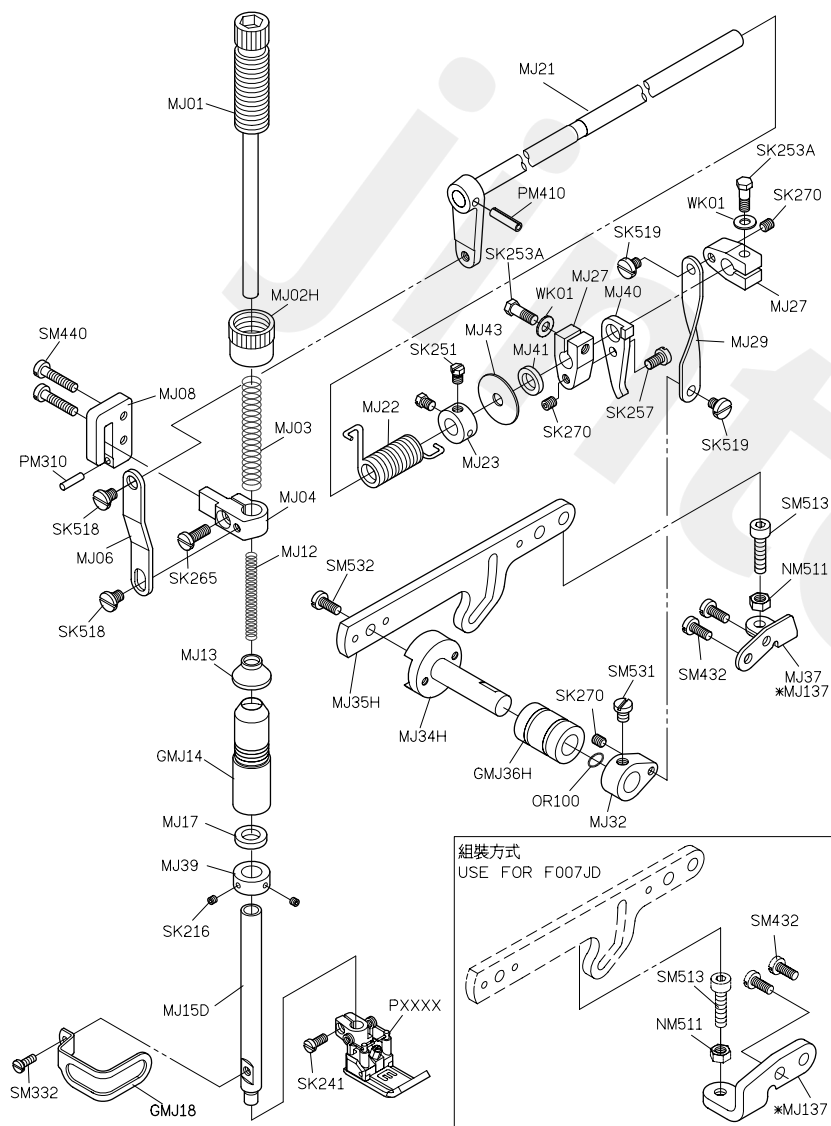


PARTS LIST FOR MH GROUP

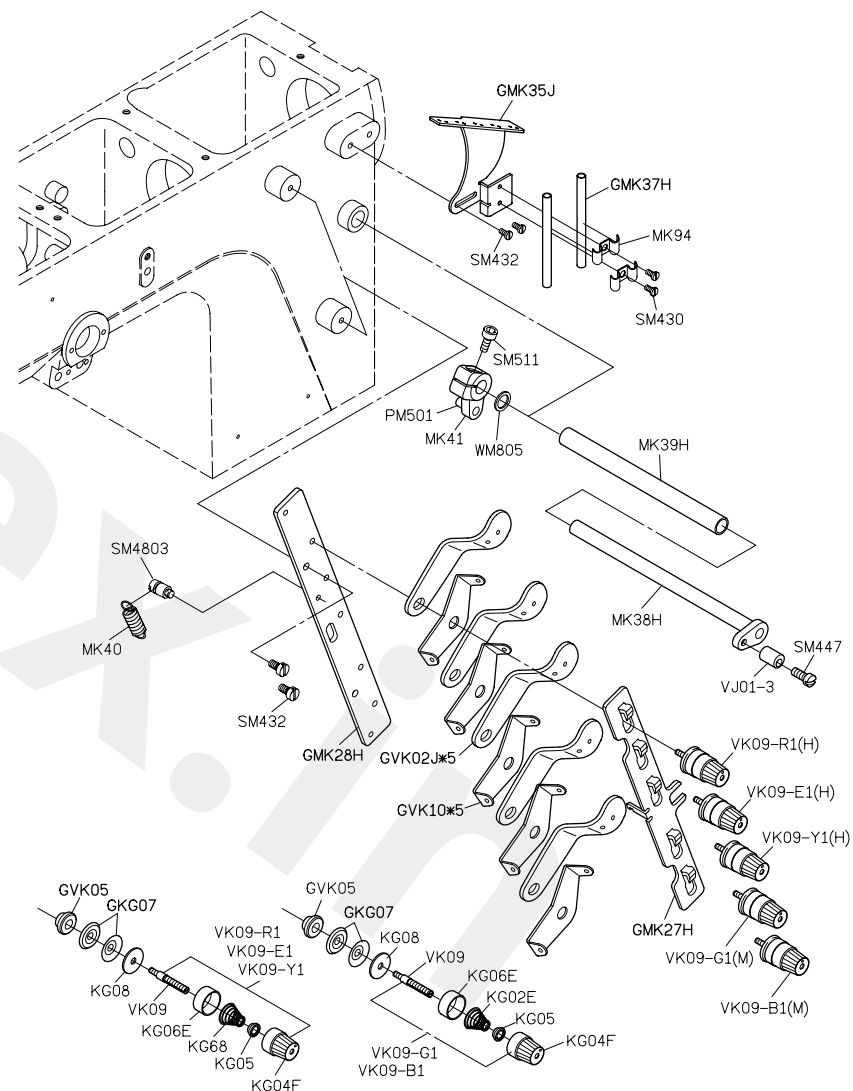
PARTS LIST FOR MJ GROUP

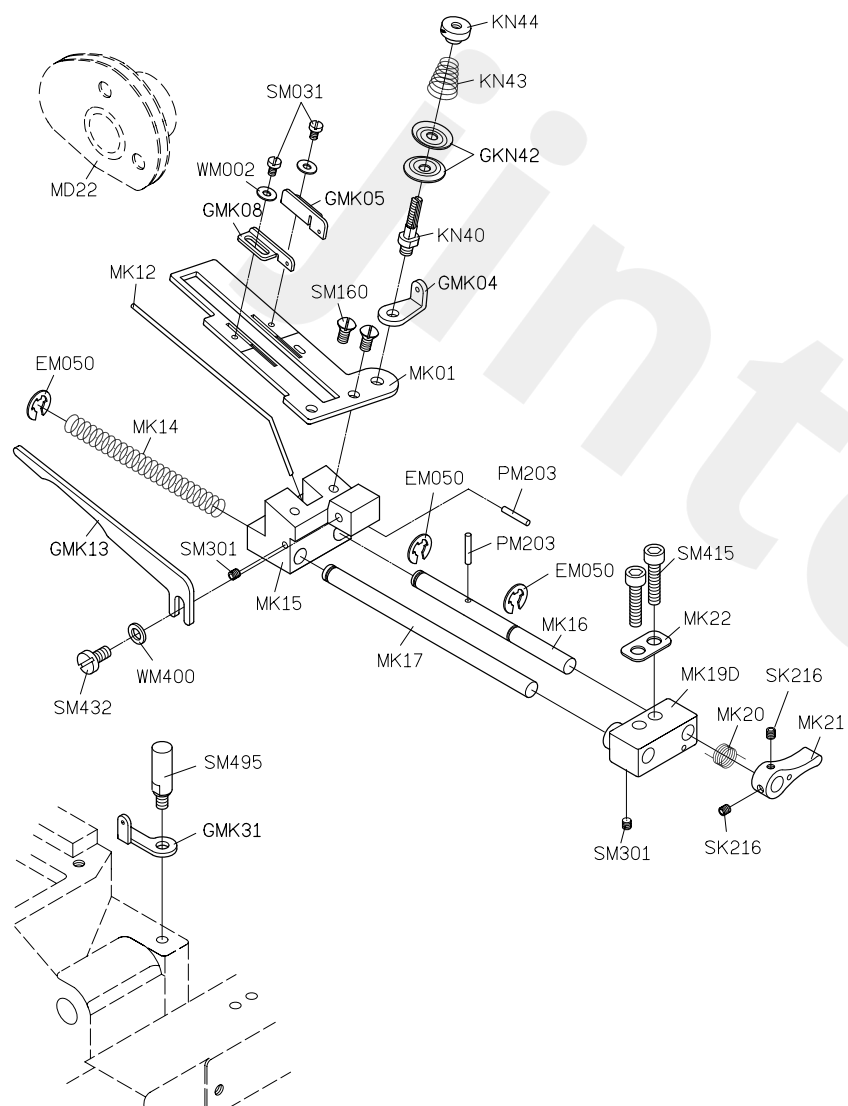
PARTS LIST FOR MK GROUP

16

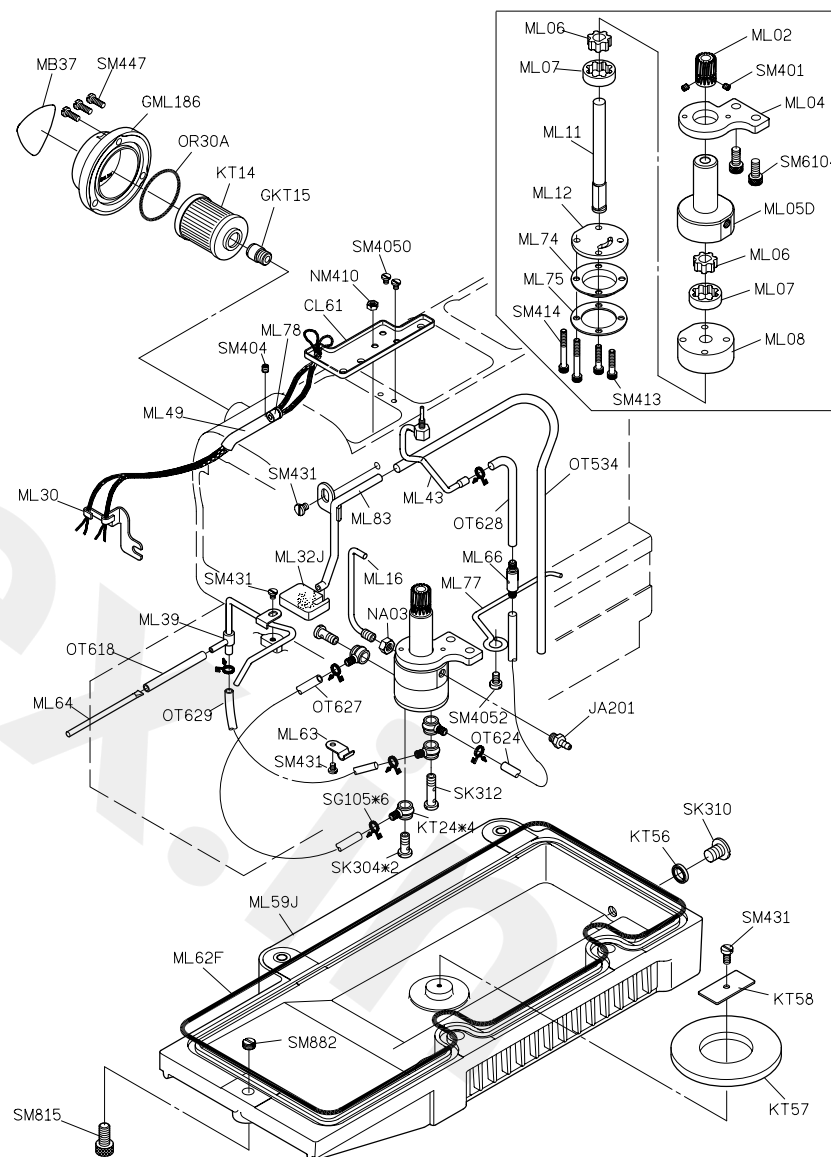


FOR F007J/F007JD
*USE FOR F007JD





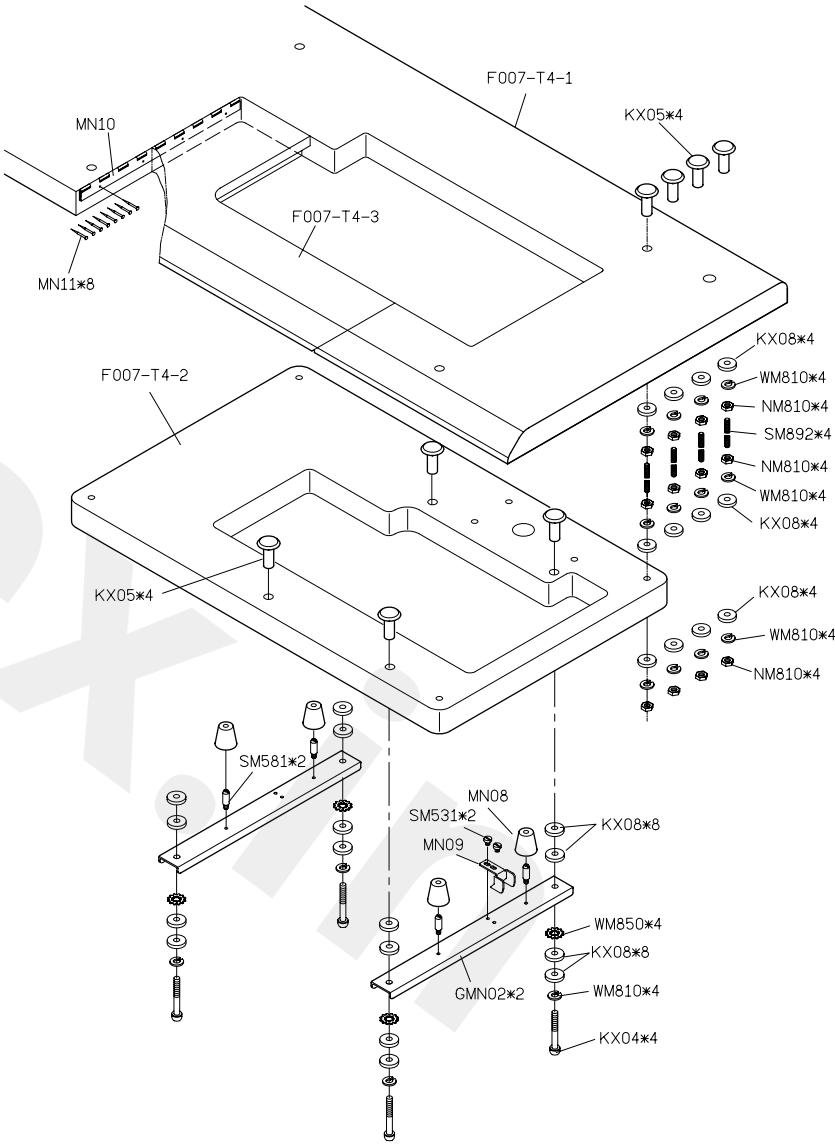
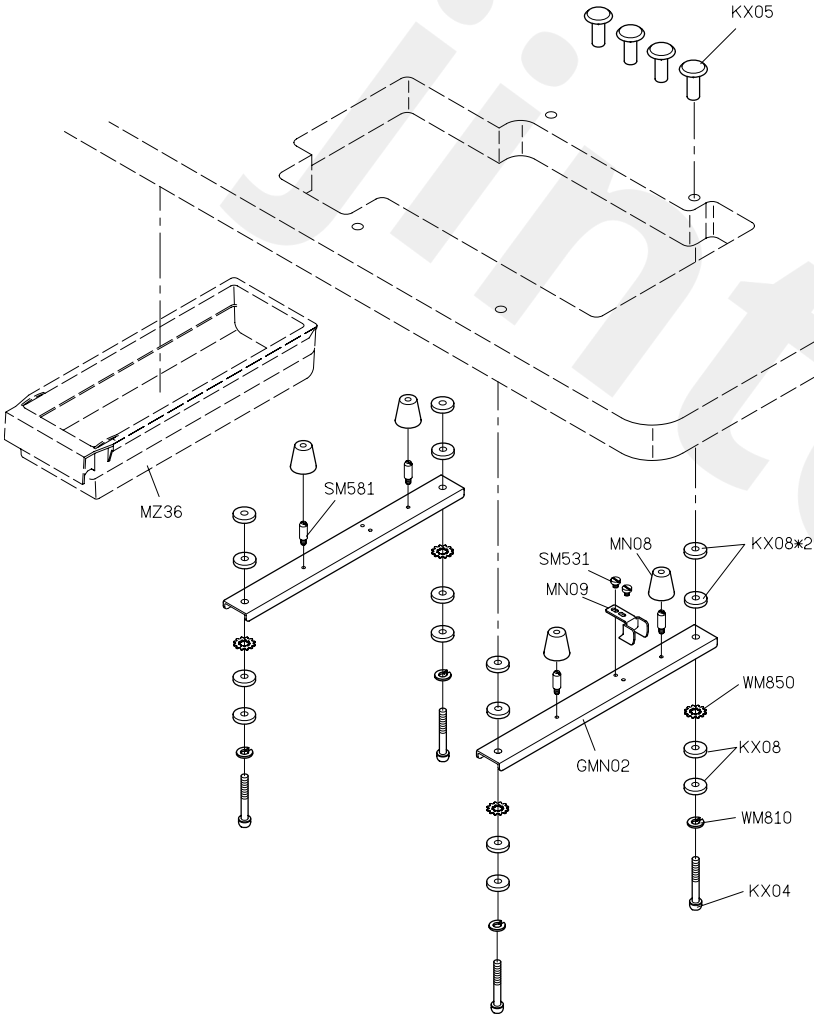
PARTS LIST FOR MK GROUP

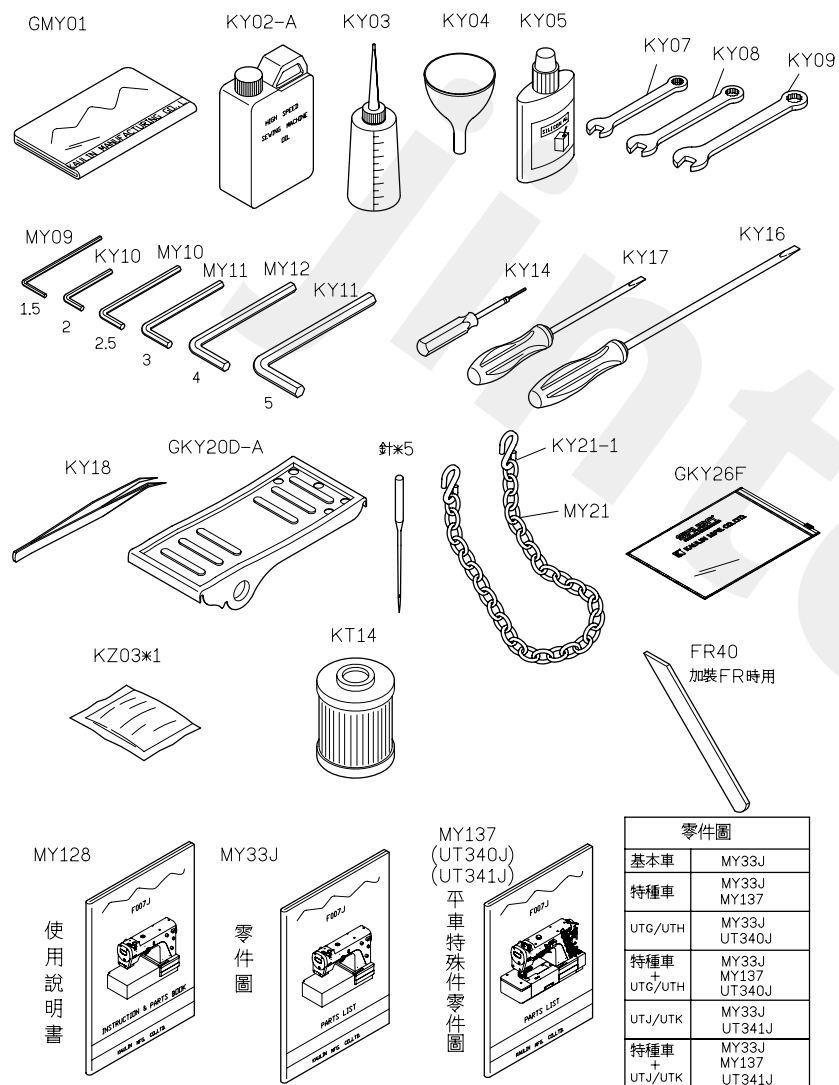


PARTS LIST FOR ML GROUP

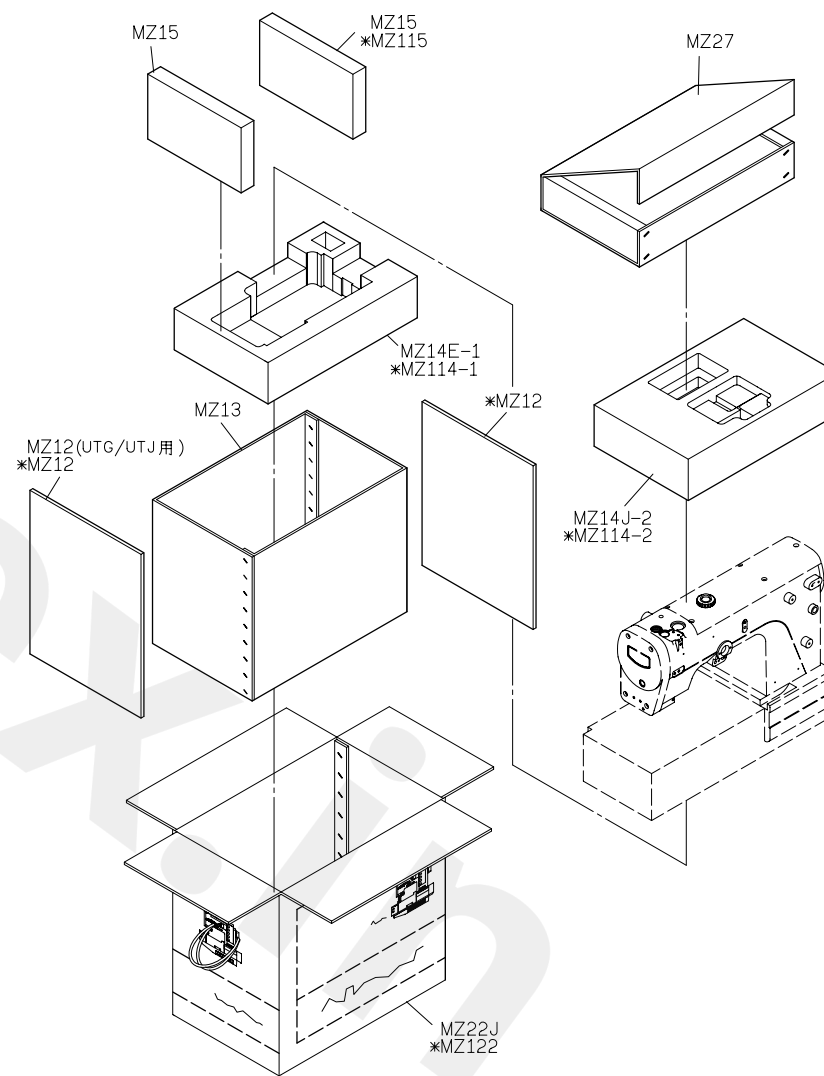
PARTS LIST FOR MN GROUP

PARTS LIST FOR MN GROUP

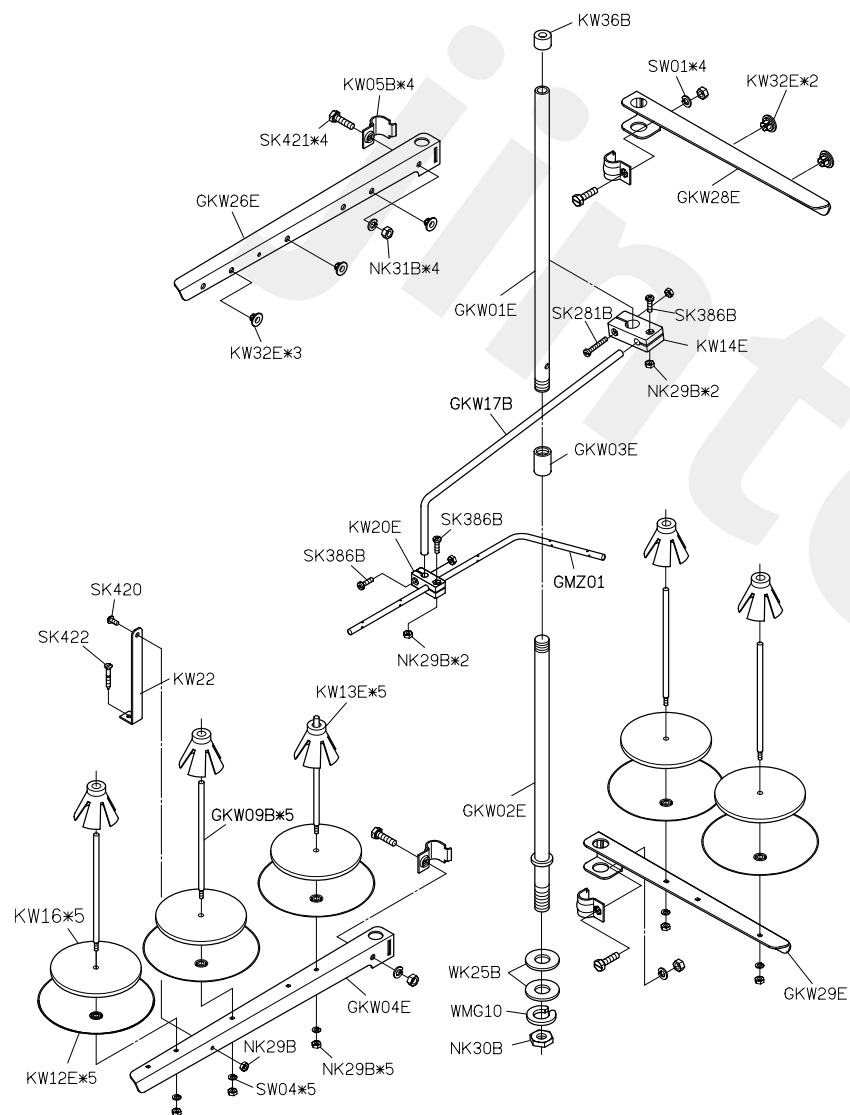




FOR F007J/F007JD
*USE FOR F007JD



FOR F007J/F007JD
*USE FOR F007JD





F007J/F007JD

高林股份有限公司 KAULIN MFG. CO., LTD.

jintex.in

The specification and/or appearances of the equipment described in this parts list are subject to change because of modification without previous notice.

MY33J. NOV 2007